

TO ALL BENTALL CENTRE TENANTS

OPERATION OF THERMOSTATS

Please follow the instructions below to operate the thermostats:

- The digital display shows the actual space temperature.
- Setpoint is controlled as follows:

For more **COOLING**: ❄️

- Press the **down** arrow
- To reach the lowest temperature setpoint (20.5°), press the down arrow 6 times
- The digital display will not change until the actual space temperature changes

For more **WARMTH**: ☀️

- Press the **up** arrow
- To reach the highest temperature setpoint (23.5°), press the up arrow 6 times
- The digital display will not change until the actual space temperature changes